

# HDUI – Setup Quick MANUAL

## 1. Identification of Remote key function in SETUP menu.

- In SETUP, only 'UP' and 'DOWN' buttons are used.
- To select, press 'OK' button
- To go back (go to the previous step), press 'Stop' button.

## 2. In SETUP, Orange color line of menu window means the location of current cursor.


To go to submenu, press 'OK' and go back to upper-menu, press 'STOP' button.

(When a menu is selected, the color is changed into Orange and the size is rather bigger)

Ex> Below image shows that the current menu is 'Audio & Video' and below window shows the detail menu on it.





## 3. For example, below menu shows that the menu window of 'Network' -> 'Client'

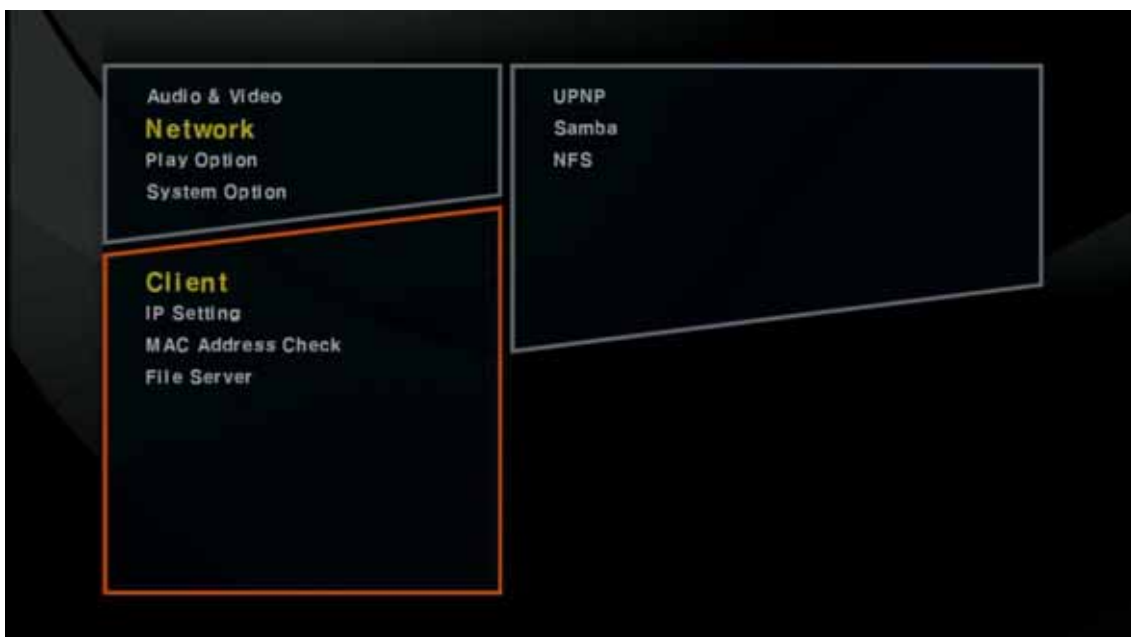

4. Above image shows the detail menu on 'Client'. If pressing 'OK', each setting window shows as below according to UPNP, SAMBA, NFS.

After selecting if you chose 'UPNP' Client or not, then go back to upper folder by pressing '**STOP**' button on the remote.

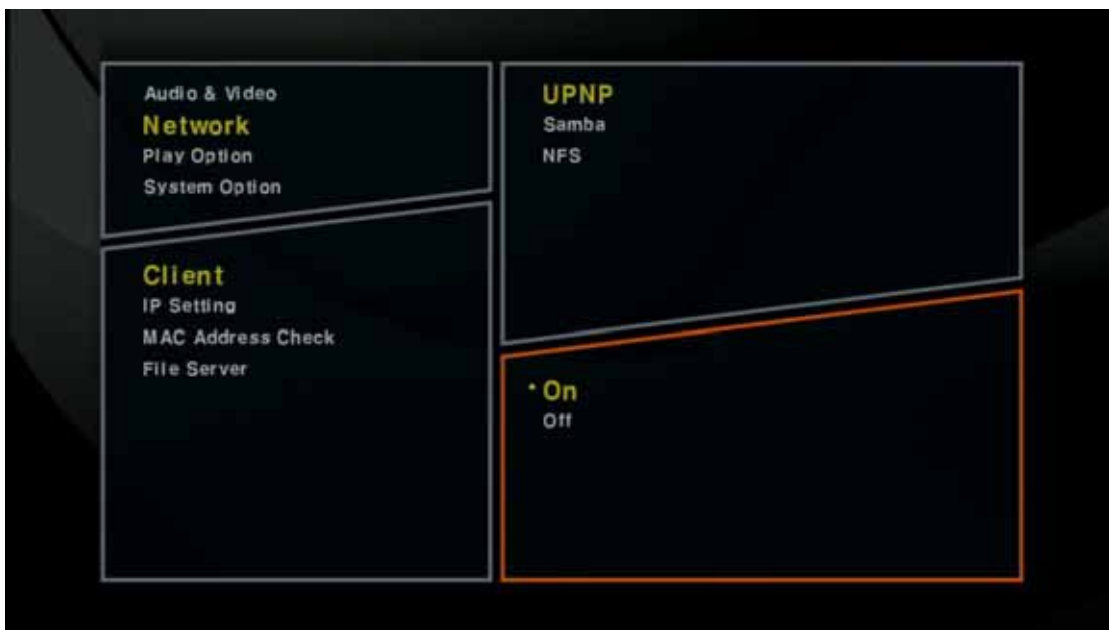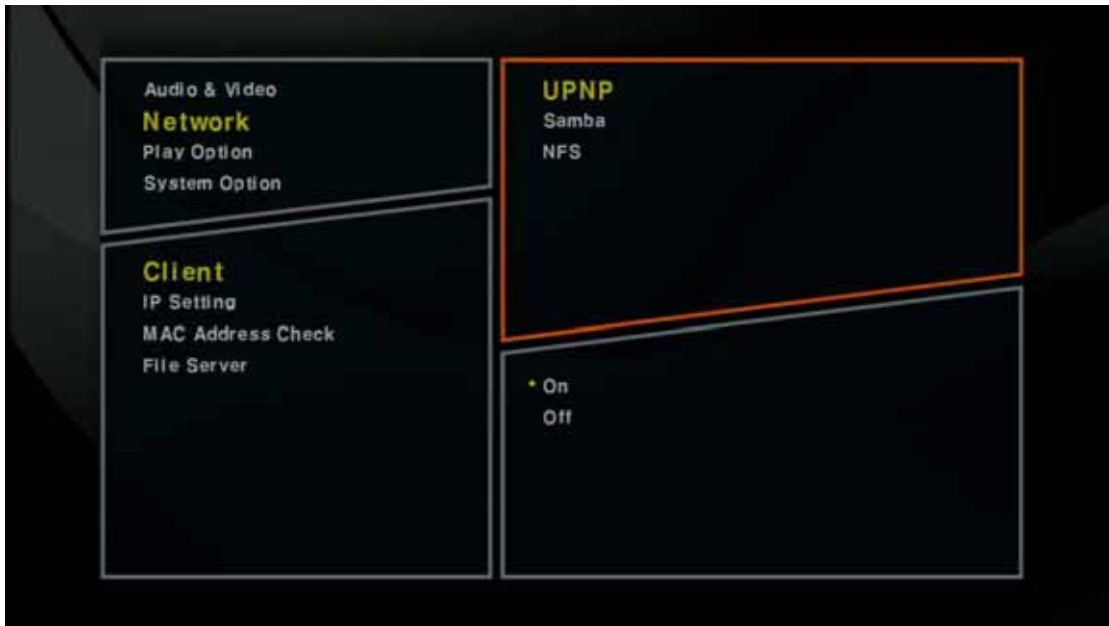

### **SAMBA Client Setting in SETUP.**

In previous F/W (Ver 1.4x), users had to write down each IP themselves and also change the share folder name into 'LAN1,2,3,4'. To make it easier and convenient, we changed SAMBA client setting into IP auto searching and detecting like PC system.

Even though it searches like PC, to make it all in order successfully, the basic requirements should be met as below.

## Pre-condition

1. In case of share folder name, supports only combination of **English and Numeral** and maximum size of share folder name is **16 digits**. (If the folder name is other languages except English, SAMBA Client may not search and detect the share folders in order.)
2. The devices (Venice V38, shared PCs, NAS and..) should be connected through the same local server.

(For example, in case of using IP like 'aaa.bbb.ccc.ddd' structure, IP of networked devices should be same at least from first to third section like 'aaa.bbb.ccc'.)

When selecting 'SAMBA', basic searching window (navigation pane) comes out as below.





If there's no searching process or it's the first connection, V38 start 'search' automatically.

Above window shows the PC and Devices detected through samba client search.

There're 2 types of icons on searched PC and device.

At first time, all icons show 'Blue' color icon. But, if the PC or device need 'account' to be connected, then the color of icon is changed into 'Green'.

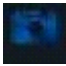Blue (No need 'account') 

Green (Need 'account') 

When connecting to the PC or Device which need 'account', POP-UP window asking for ID/Password comes out as below..



Insert ID/Password for the device you want to connect and press 'OK' button.

When inserting ID/Password, please be careful of a capital letter and small letter.

(in case of PC or Device without 'account', the POP UP window doesn't show)

In account setting window, please use 'UP' and 'DOWN' button for moving between menus.

Press '**STOP**' button to go back and cancel the account setting.

After inserting ID/Password correctly for account of the PC, shared folders come out on right side in the window.

In below image, 'audio, lan1, util' are share folders in the PC.




If you press 'OK' button in 'WIN7-ST5', then the cursor moves to the share folder section (right side).


Press 'STOP' button to go back to PC (WIN7-SYS).

In case choosing all share folders in the PC, the icon box of PC (WIN7-SYS) has white background color and 'V' check mark. But, in case of choosing partial folders among all, it has grey background color and 'V' check mark.

In case of choosing all share folders

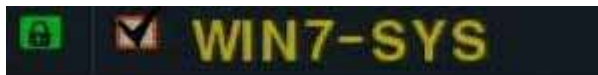

In case of choosing partial folders

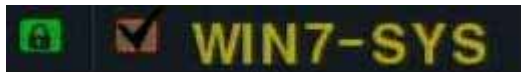

SAMBA client search POP UP window is composed of 3 sections. Check below image.



Left side: names of searched devices and PCs.

Right side: Shared folder names of each PC or device.

Bottom: Button menu for 'Search (act 'search process again)' or 'Apply (final setting is applied)'

For the move between PC name and share folder name, press 'OK' and 'STOP' button. To go to menu Bar, please press 'MENU' button.

After selecting share folders, even though pressing 'STOP' button and go upper menu without checking 'Apply' in Menu bar, it applies the selection.

## NFS Setting in SETUP

In previous F/W (Ver 1.4x), to mount and support NFS, PC or NAS devices have to install 'VNS' program which Skydigital make and provide or nominate the share name into 'venice\_nfsmount'.

In HDUI F/W, we improved it. In case of share name, it's not fixed and users can change and write down the share name themselves.

Choose 'NFS' in 'Network'-> 'Client' of SETUP.



Insert IP of PC or NAS in which NFS server is working.

<Notice> When inserting IP, '.' and 'one pressing space bar' work the same function.


Default share name is 'venice\_nfsmount' and it can be changed and amended.

After completing IP insert, check 'Apply' by using 'UP/DONW' button.

## Use of NFS & SAMBA Client

After finishing the setting process of NFS and SAMBA, press 'SETUP' button and go back to the main menu.

Move to the 'Network' icon in main menu. You can find the activated submenus (SAMBA/NFS)

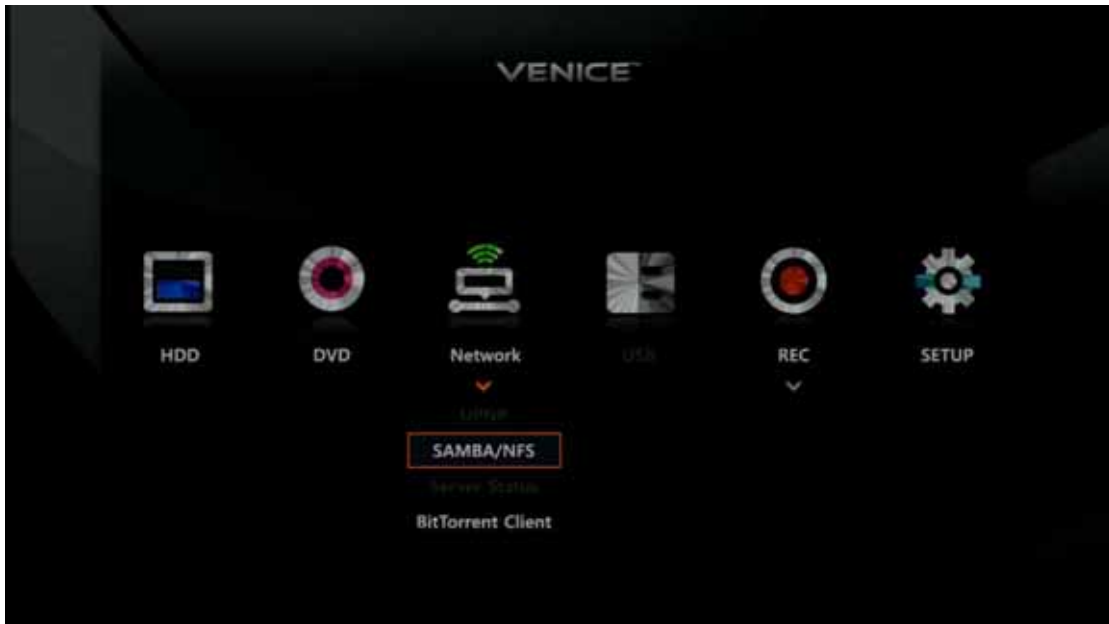

Move to 'SAMBA/NFS' and select it by pressing 'OK' button.



Server lists connected to 'NFS' and 'SAMBA' come out as above.

\* NFS Server: 

\* SAMBA Server: 